 


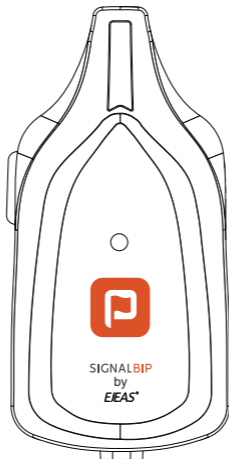

SIGNALBIP
by
EJEAS®



Referee Mesh Intercom System


ref : KAU

User Manual



Web: www.signalbip.com

Product

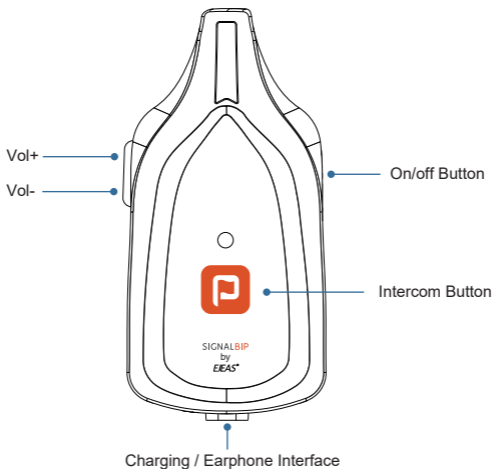

Note : Only standard headphones can be used



6-people Mesh Talking



Channel Switching



Microphone Mute



400-800m Distance




Software Upgraded



Type-c


Product Models

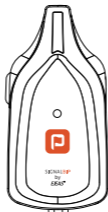

F6 Referee Intercom



 Mesh System



6 people connect
Support 5 channels
Super penetrating power
Intercom distance reaches 400-800 meters
in diameter.

LED Lights



Red



Blue



Green

Operations

Button Description



Short press/click



Double-click



Long press for 1s



Long press for 3s



Long press for 5s

Basic Operation

On & Off / Battery Level Please fully charging before using



Power On


Long press the <Power button> for 1s until the blue light on with "Power on" voice tip. After power on, blue light flashes slowly.

- Blue light flashes 🔊 "Di Di Di"

Power Off

Long press the <Power button> for 1s until hear the "Power off" voice tip.

Reset : press the <ON-OFF> button, <Vol+>, <Vol-> simultaneously 3s

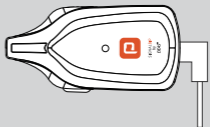

Battery Level

Red light always on while charging
When the battery is low, red light flashes twice quickly with voice tip "low battery".
Device will automatically power off when battery level is too low

Battery Enquiry

Long press the <Vol+> and <Vol-> for 1s, you will hear the "Battery high", "Battery medium" or "Battery low".

- Red light flashes quickly 🔊 "Battery Level Low"

Mesh Intercom



Long press the <Intercom button> for 5s until hearing the voice tip "Mesh Intercom pairing" to enter pairing mode. At the same time, red and blue lights alternately flashing.

• Red light blue light alternately flashing

🔊 "Mesh Pairing"



Choose one of those as the main unit, short press the <Intercom button>, after hearing the voice tip "beep". At the same time, red and blue lights alternately double flashing.

• Red light blue light alternately double flashing

🔊 "Beep"

3

Wait for a moment and hear the voice "pairing successful".

🔊 "Pairing successful"

4

Wait a few moments, when you hear the voice "channel n 'XXX.X megahertz", the pairing is done. You can talk to each other to hear their voice.

Mesh Intercom Reconnected



Short press the <Intercom button>, Voice tip "Join the Mesh", When you hear "channel n 'XXX.X megahertz", then the reconnection is done.

Turn Off Mesh Intercom



Long press the <Intercom button> for 1s to turn off the Mesh intercom. Voice tip "Mesh Close"

Intercom Channel Switching



Total 5 channels,
Short press both the <Intercom button> & <Vol+> or
both the <Intercom button> & <Vol-> to switch the
next or previous channel.

Note: The whole team should be in the same
channel

🔊 "channel n 'XXX.X megahertz"

Power on Reconnection



If you turn off the device without turning
mesh intercom off, the intercom is
automatically restore the mesh device
when next time you power on.

Microphone Mute



Short press the <Intercom button> to
mute the microphone.
Voice tip "Microphone Mute"
Short press the <Intercom button> again
to unmute.
Voice tip "Microphone UnMute"